


Fitting Shark Armrest backing plate.

This is a brief explanation of how to fit the backing plate I have manufactured to extend armrest life.

1. Remove armrest from door. This done by removing door lever trim with Philips head screwdriver. Remove center trim by carefully pulling top rear corner to prise out plastic plugs, a large screw driver may assist but don't blame me if you damage something. Remove 6 off screws holding armrest. The front one is behind the air vent trim, the 2 lower ones are in the armrest pocket and should have little black plastic caps to hide them. On the drivers door make note of the way the wires connect to the mirror controls and remove the wires.
2. Remove the two screw marked #1 from the door handle, align the plate on the back of the armrest and place a clamp on it, all five mounting holes should align with the backing plate, the hole marked #2 is the most difficult to line up, if you can't get it to move into place with sufficient room to fit the nut on the back, don't worry its not essential to the rigidity of the plate. If you can get it to align, drill a 5 mm hole through the plastic and fit the M5 x 10 screw, this screw may also interfere with the center trim of the door, if it does, leave it off.
3. Align the rear end of the armrest and drill hole marked #3, fit the screw and screw it up tightly.
4. Now drill the final two holes marked #4 & #5.
5. Fit all the screws with the large washers on the plastic side.
6. Re-install armrest to shark and take car out for a test drive and enjoy!

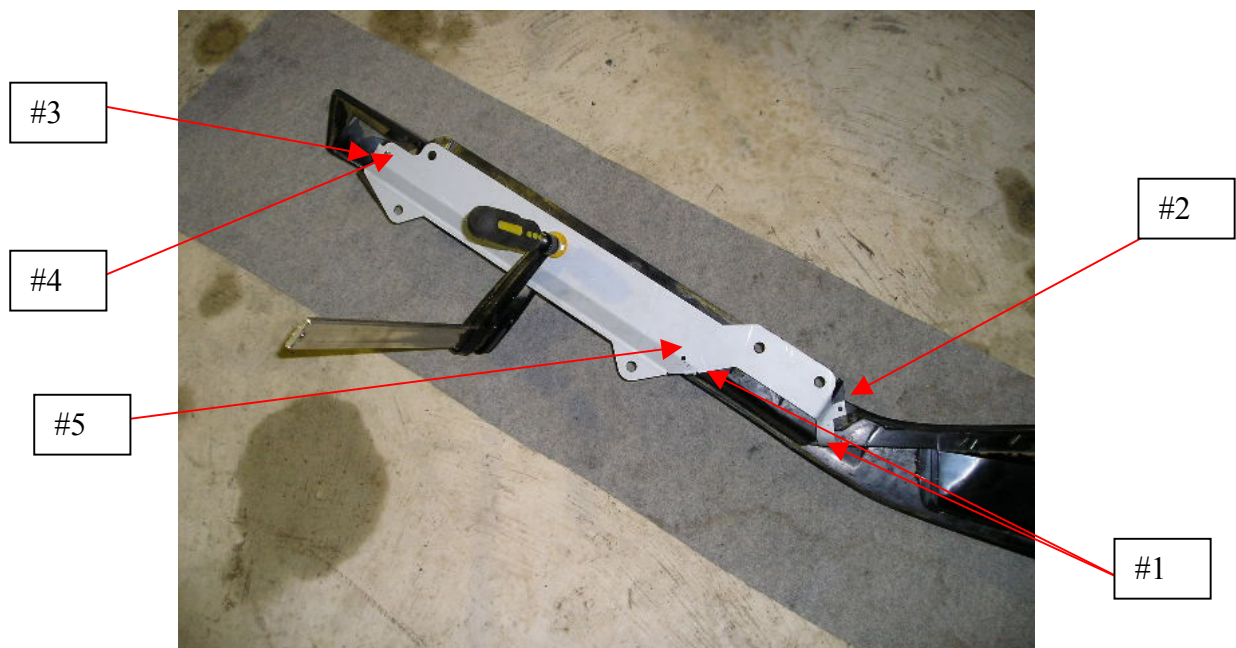

Any problems please call me on 0411 520 920

Peter Clark